


**AKAI - MPD32**

**(with the « MixVibes Cross.SQS » preset available on our forum)**

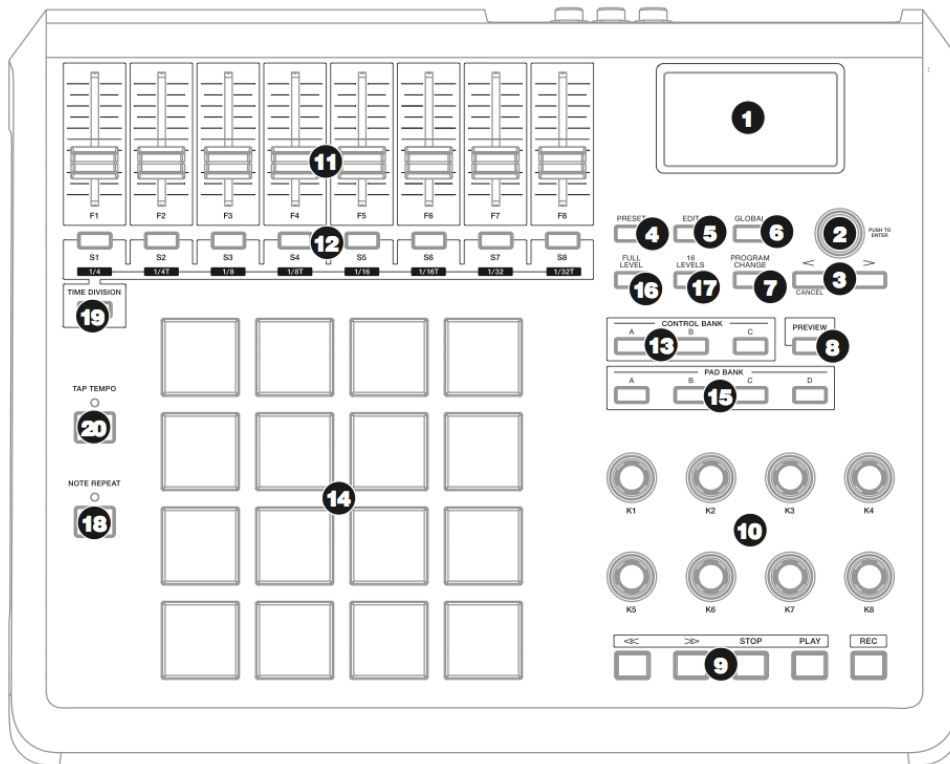

- 1&2 – Select & load « MixVibes Cross.SQS » preset
- 9 ← → FX1 off-on
- Stop Play FX 2 off-on
- 10 – FX 1&2 : Select / Amount / Depth / Source
- 11 – Pad volume
- 12 – Pad mute
- 13A – Sampler C
- 13B – Sampler D
- 14 – Upper : Sampler C / Down : sampler D
- 15A – Pad control
- 15B – Pad mode
- 15C – Pad pitch bend sampler C
- 15D – Pad pitch bend sampler D