



AMERICAN AUDIO - VMS2
(with the firmware version 2.6 available on our forum)

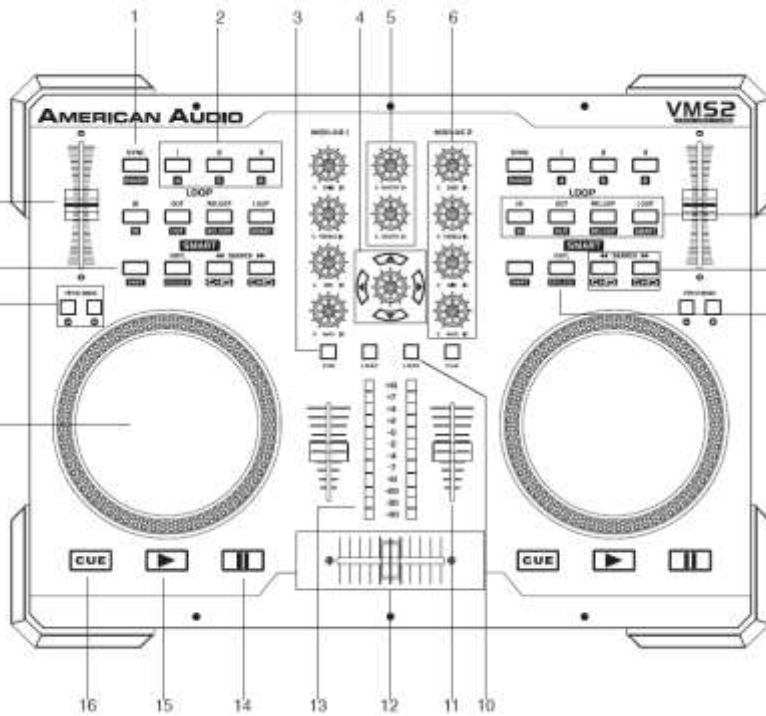

- 1 – Sync - *Range*
- 2 – Locators - *Clear*
- 3 – Monitor
- 4 – Browse the active browsable /
Primary action – *FX Amount*
Up. Toggle display mode – *Select FX*
Down. Add to prepare – *Select FX*
- 5 – Master / Booth
- 6 – EQ
- 7 – In / Out / Loop / *Auto loop OnOff*
- 8 – Seek / *Auto loop length*
- 9 – Vinyl mode - *Pitch mode*
- 10 – Load
- 11 – Fader
- 12 – Crossfader
- 13 – Vu-meters
- 14 – CuePlay
- 15 – Play
- 16 – Cue – *Set Cue*
- 17 – Jogs
- 18 – Pitch bend - *Fine*
- 19 – Shift

CROSS audio configuration:
 select External mixer

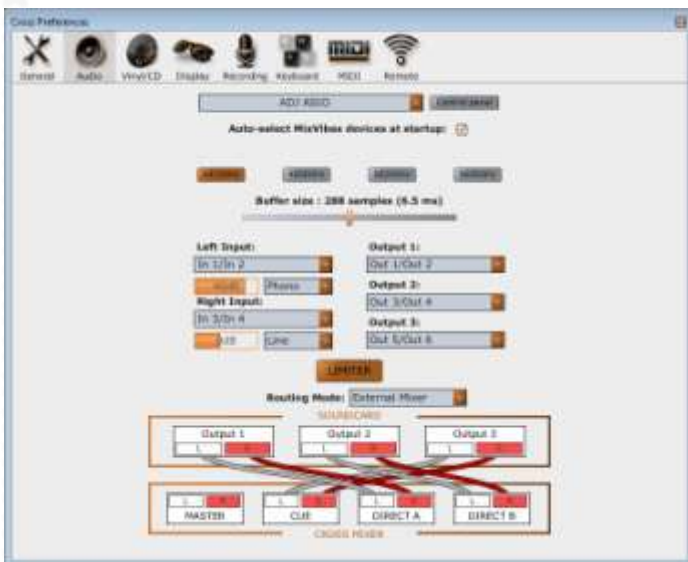

On the VMS2 front panel, set the
 CH1 on USB1 and CH2 on USB2