


**DENON - DN-HC1000S**

- |                              |                       |
|------------------------------|-----------------------|
| 7 - Beat /<br>Invert control | 17 - Reverse          |
| 8. 9. 10. - Locators         | 18 - Confirm tap      |
| 13 - Auto Loop               | 19 - Load             |
| 14 - Loop in                 | 25 - Browse / Preview |
| 15 - Loop out                | 26. 27 - Browse       |
| 16 - Loop on/off             |                       |

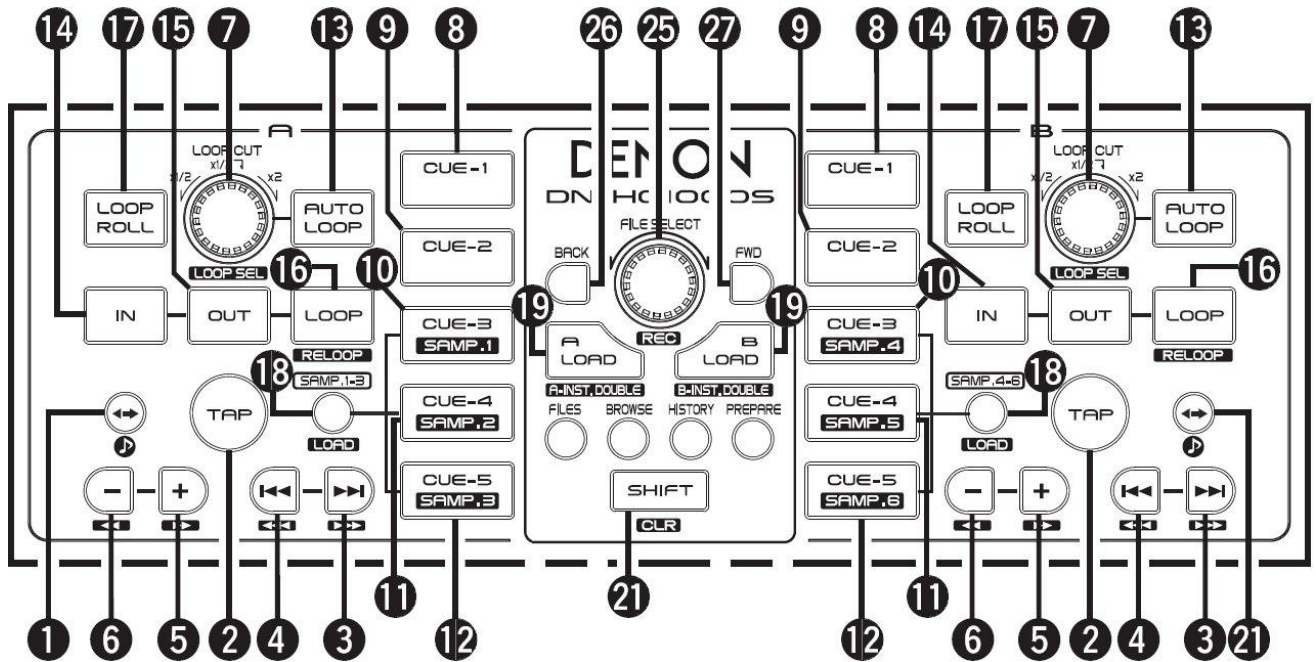

- |                |                     |
|----------------|---------------------|
| 1 - Pitch mode | 5. 6. - Seek length |
| 2 - Tap tempo  | 11 - Absolute mode  |
| 3. 4. - Seek   | 12 - Relative mode  |