


DENON - DN-MC2000

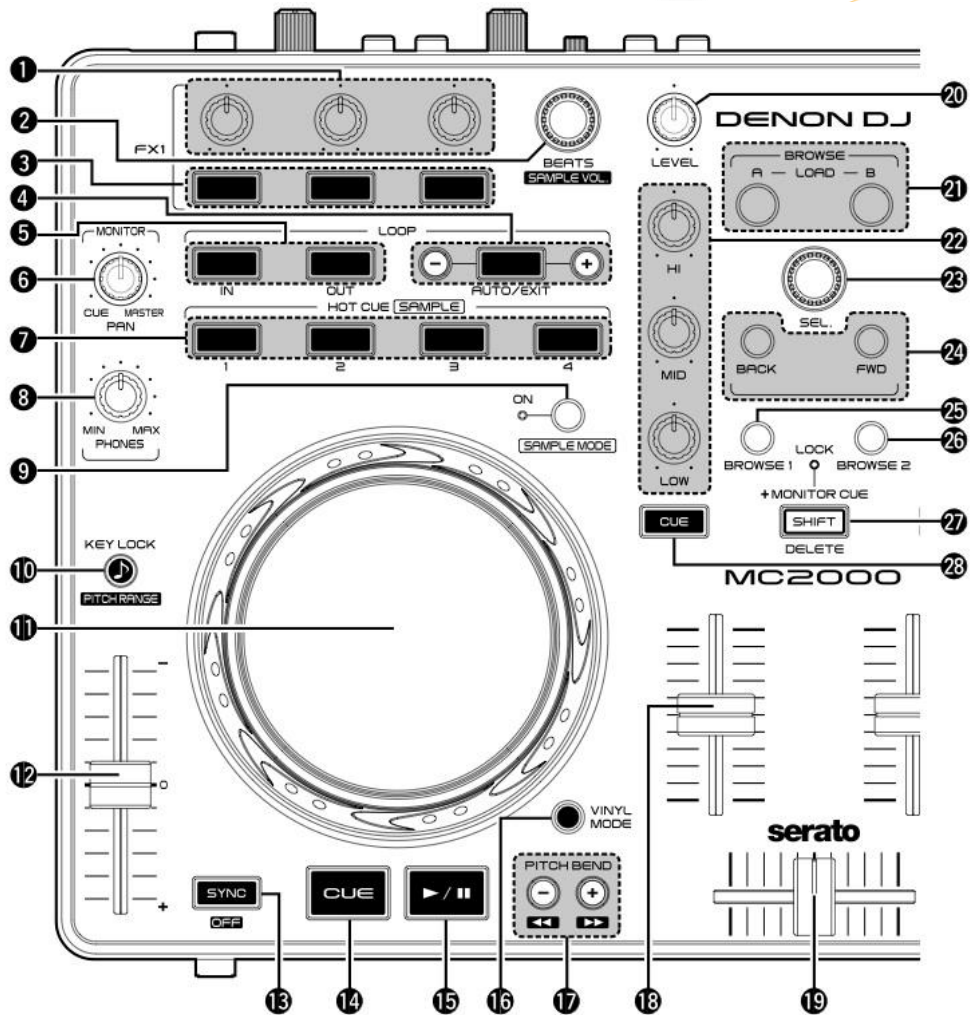

- | | |
|--|-------------------------------------|
| 1 - FX select/Amount/Depth | 15 - Play - <i>CuePlay</i> |
| 2 - FX routing / FX OnOff - <i>Sample volume</i> | 16 - Jog mode |
| 3 - Echo On/Off / Flanger On/Off / Roll On/Off | 17 - Pitch bend - <i>Seek</i> |
| 4 - Auto loop - <i>Loop OnOff</i> | 18 - Volume fader |
| 5 - Manual loop | 19 - Crossfader |
| 6 - Cue mix | 20 - Gain |
| 7 - Locators / Samplers - <i>Delete</i> | 21 - Load - <i>Clone</i> |
| 8 - Cue volume | 22 - EQ - <i>Filter</i> |
| 9 - Pads switch | 23 - Browse active / Primary action |
| 10 - Pitch mode - <i>Pitch range</i> | 24 - Change active |
| 11 - Jogs - <i>Seek</i> | 25 - Collection expand |
| 12 - Pitch | 26 - Full screen |
| 13 - Sync / Sync sampler | 27 - Shift |
| 14 - Cue - <i>Set cue</i> | 28 - Monitor |