


**DENON - DN-MC3000**

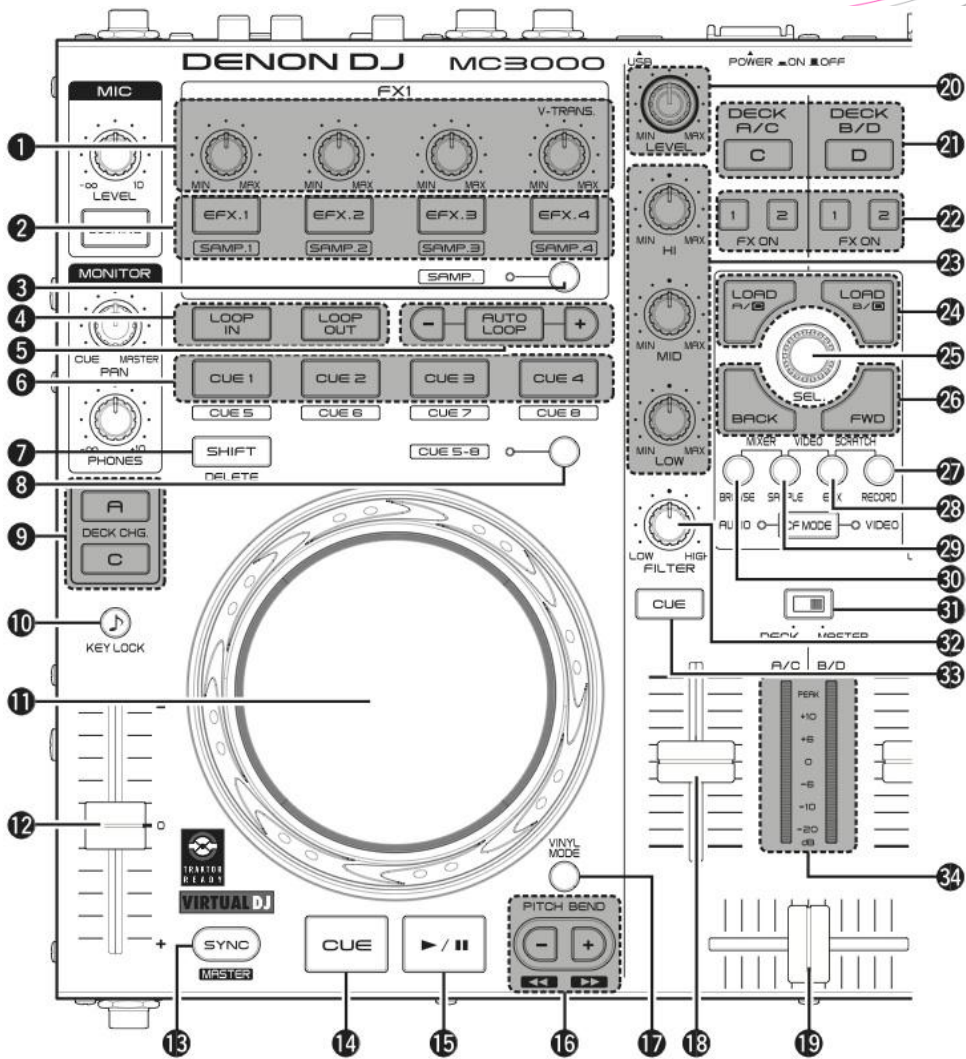

- 1 - **FX:** Select / Amount / Depth / Brake time
- Samp. :** Pad volume
- Sample mode:** Pad rolling frequency
- 2 - **FX:** FX On/Off / Echo On/Off / Flanger On/Off / Roll On/Off
- Samp.:** Play/Stop samples - *Pad mode*
- Sample mode:** Load samples from list
- 3 - Sampler mode
- 4 - Loop in/out
- 5 - Auto loop - *Loop On/Off - Smart Seek*
- 6 - Locators

- Sample mode:** Mute samples
- 7 - Shift
- 8 - Locators switch
- 9 - FX / Sampler switch
- 10 - Pitch Mode - *Pitch Range*
- 11 - Jog
- 12 - Pitch
- 13 - Sync - *Match*
- 14 - Cue - *Set Cue*
- 15 - PlayPause - *CuePlay*
- 16 - Pitch bend - *Seek*
- 17 - Vinyl mode - *Slip mode*
- 18 - Channel volume
- 19 - Crossfader
- 20 - Gain
- 21 - Fx switch

- 22 - Fx channel
- 23 - EQ
- 24 - Load - *Clone*
- 25 - Browse - Expand and Collapse folder in browser tree / Preview in browser list
- 26 - Change active browsable
- 27 - Record
- 28 - Show/Hide FX
- 29 - Sample mode (holder)
- 30 - Expand or Collapse collection
- 32 - Filter
- 33 - Monitor - *CF assign*