


**DENON - DN-S1200**

**(deck A: channel 1; deck B: channel 2; focus: channel 3)**

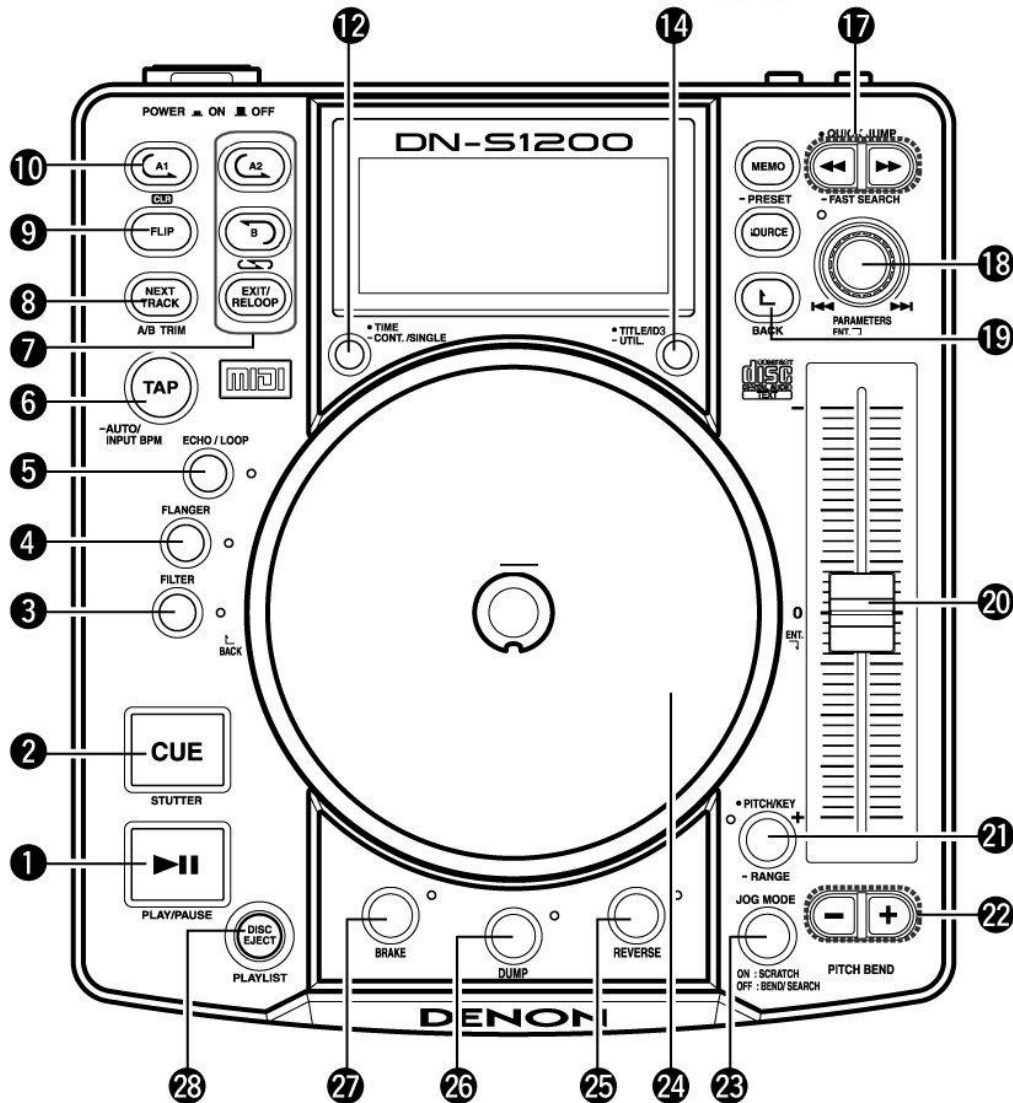

1 - Play / Pause

2 - Cue

3.4.5 - Effects

6 - Tap tempo

7 - Loop in / out / on/off

8 - Loop /2

9 - Loop \*2

10 - Autoloop

12 - Confirm tempo

14 - Discard tempo

17 - Smart seek - *Seek length*

18 - Browse / Load

19 - Reverse

20 - Pitch

21 - Pitch mode - *Pitch range*

22 - Pitch Bend - *Fine*

23 - Vinyl mode

24 - Jog / Fx amount

25 .26.27 - Locators

28 - Shift

**Memo** : change deck (focus)