


DENON - DN-S3700

(deck A: channel 1; deck B: channel 2)

Hybrid MIDI Sel: 3 kHz

Select « Sinus 3kHz » control media in CROSS Vinyl/CD preferences

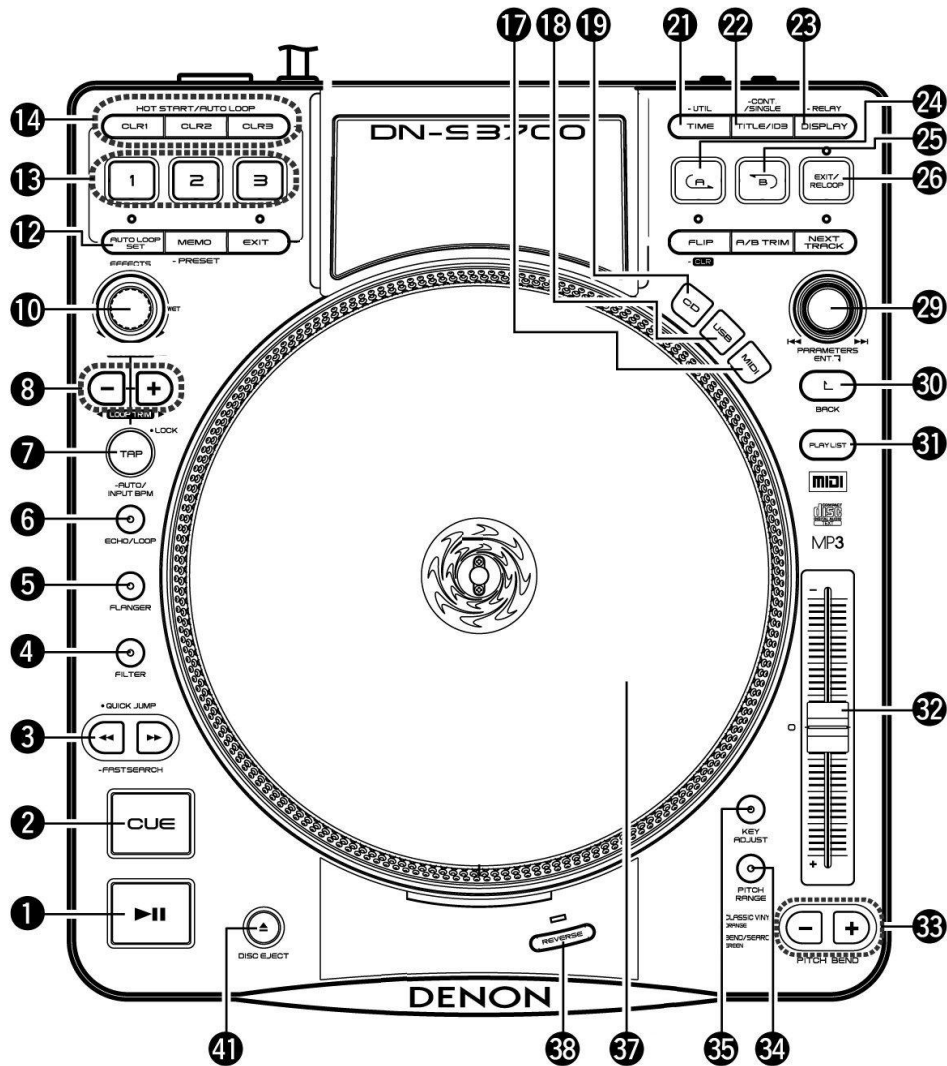

- | | | |
|---------------------------------------|----------------------------------|------------------|
| 1 - Play / Pause | 21 - Full screen on.off | 32 - Pitch |
| 2 - Cue | 22 - Invert display | 33 - Pitch bend |
| 3 - Seek | 23 - Change display | 34 - Pitch range |
| 4.5.6 - Select effect | 24 - Loop in | 35 - Pitch mode |
| 7 - Tap tempo - <i>Confirm Tap</i> | 25 - Loop out | 37 - Jog |
| 8 - Loop length - <i>Seek lenght</i> | 26 - Loop on.off | 38 - Reverse |
| 10 - Effect select / on.off | 29 - Browse / Load | 41 - Shift |
| 12 - Autoloop | 30 - Perform Primary Action | |
| 13 - Locators 1 to 3 - <i>4 to 6</i> | 31 - Change the active browsable | |
| 14 - Clear loc 1 to 3 - <i>4 to 6</i> | | |