


DENON – SC2900

(deck A: channel 1; deck B: channel 2; deck C: channel 3; deck D: channel 4)

MIDI Mode: Normal

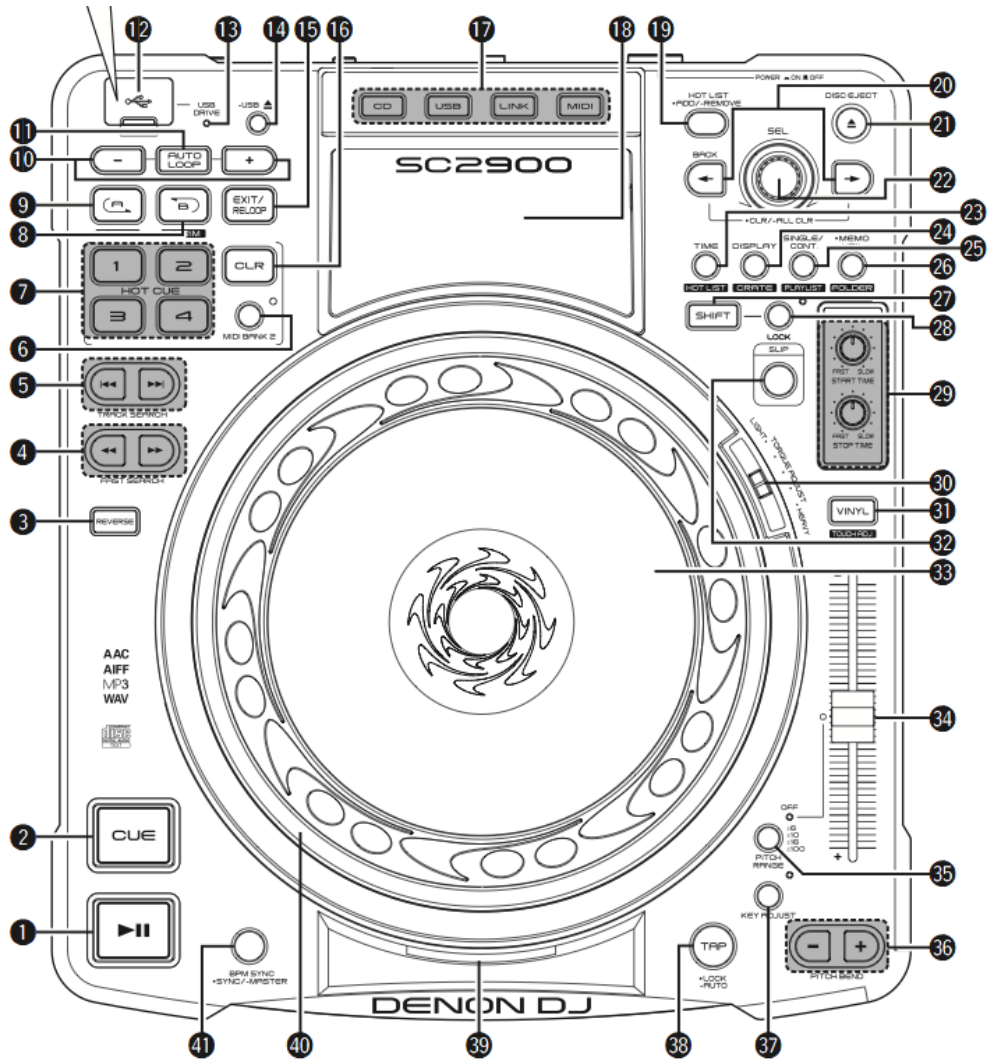

- | | | |
|---------------------------------|----------------------------------|----------------------------------|
| 1 – Play / Pause | 16 – Clear locators | 33 – Jogwheel |
| 2 – Cue | 20 – Change the active browsable | 34 – Pitch |
| 3 – Reverse | 21 – Empty deck | 35 – Pitch range |
| 4 – Seek | 22 – Browse / Load | 36 – Pitch bend |
| 5 – Seek value | 23 – Time display | 37 – Pitch mode |
| 6 – Locators bank 2 | 24 – Change display | 38 – Tap tempo - <i>Confirm</i> |
| 7 – Locators | 27 – Shift | 39 – Master |
| 8-9 – Manual loop – Loop adjust | 29 – Start / Brake time | 41 – Sync – <i>Set as master</i> |
| 10-11 – Autoloop | 31 – Jog mode | |
| 15 – Exit / Reloop | 32 – Slip mode | |