



DJ Control Air+ FOR CROSS DJ

SETUP DRIVERS HERCULES DJ CONTROL AIR +



CROSS DJ SETUP
2 Players & 2 samplers
4 locators per decks
4 pads per sampler

AIR CONTROL		FX1/FX2 AMOUNT
BANK 1 ON		
	BUTTON 1	FX1/FX2 SELECT AND TRIGRER (LOWPASS)
+ SHIFT	BUTTON 1	PITCH RANGE
	BUTTON 2	FX1/FX2 SELECT AND TRIGRER (ECHO)
+ SHIFT	BUTTON 2	PITCH MODE
	BUTTON 3	FX1/FX2 SELECT AND TRIGRER (BLISS)
+ SHIFT	BUTTON 3	SLIP MODE
	BUTTON 4	FX1/FX2 SELECT AND TRIGRER (ROLL)
+ SHIFT	BUTTON 4	TAP TEMPO / CONFIRM TAP TEMPO
BANK 2 ON		
	BUTTON 1	LOOP ROLL 1/8
+ SHIFT	BUTTON 1	LOOP SELECT AND TRIGGER 2
	BUTTON 2	LOOP ROLL 1/4
+ SHIFT	BUTTON 2	LOOP SELECT AND TRIGGER 4
	BUTTON 3	LOOP ROLL 1/2
+ SHIFT	BUTTON 3	LOOP SELECT AND TRIGGER 8
	BUTTON 4	LOOP ROLL 1
+ SHIFT	BUTTON 4	LOOP SELECT AND TRIGGER 16
	PITCH	PITCH VALUE
+ SHIFT	PITCH	KEY SEMITONES
	JOGWHEEL	JOGWHEEL
+ SHIFT	JOGWHEEL	SMART SEEK
GAIN	GAIN	FILTER LED OFF = GAIN A/B
FILTER ON	GAIN	FILTER LED ON BY DEFAULT = FILTER A/B
HOTCUE	PAD 1	LOCATOR 1
	PAD 1	DELETE LOCATOR 1
	PAD 2	LOCATOR 2
+ SHIFT	PAD 2	DELETE LOCATOR 2
	PAD 3	LOCATOR 3
+ SHIFT	PAD 3	DELETE LOCATOR 3
	PAD 4	LOCATOR 4
+ SHIFT	PAD 4	DELETE LOCATOR 4
SAMPLE ON	PAD1	SAMPLER C/D PAD 1 CONTROL
+ SHIFT	PAD 1	SAMPLER C/D PAD 1 MODE
	PAD 2	SAMPLER C/D PAD 2 CONTROL
+ SHIFT	PAD 2	SAMPLER C/D PAD 2 MODE
	PAD 3	SAMPLER C/D PAD 3 CONTROL
+ SHIFT	PAD 3	SAMPLER C/D PAD 3 MODE
	PAD 4	SAMPLER C/D PAD 4 CONTROL
+ SHIFT	PAD 4	SAMPLER C/D PAD 4 MODE

	SHIFT	MODIFIER 1
	SYNC	SYNC WITH MASTER
+ SHIFT	SYNC	SET AS MASTER
	CUE	CUE
+ SHIFT	CUE	SET CUE
	PLAY	PLAY/PAUSE
+ SHIFT	PLAY	CUE-PLAY
	MONITOR	CUE MONITOR A/B
+ SHIFT	MONITOR	CROSSFADER ASSIGN A/B
	VINYL	VINYL ON/OFF FOR A AND B
	REC	RECORD
	MAGIC	SYNC LINK
	CROSSFADER	CROSSFADER
	FADER LEFT	VOLUME A
+ SHIFT	FADER LEFT	VOLUME C
	FADER RIGHT	VOLUME B
+SHIFT	FADER RIGHT	VOLUME D
	LOAD A	LOAD A
+ SHIFT	LOAD A	RELOAD AS CLONE OF MASTER
	LOAD B	LOAD B
+ SHIFT	LOAD B	RELOAD AS CLONE OF MASTER
	TREBLE	HI
	MEDIUM	MID
	BASS	LOW
	BROWSER	BROWSE THE ACTIVE BROWSABLE
+ SHIFT	BROWSER	CHANGE THE ACTIVE BROWSABLE
+ PUSH	BROWSER	PERFORM PRIMARY ACTION
LED	RED	2 ON THE LEFT = BEATFLASH A
		2 ON THE RIGHT = BEATFLASH B
	BLUE	1 ON THE LEFT = SLIP STATE A
		1 ON THE RIGHT = SLIP STATE B