


MIXVIBES - VFX CONTROL

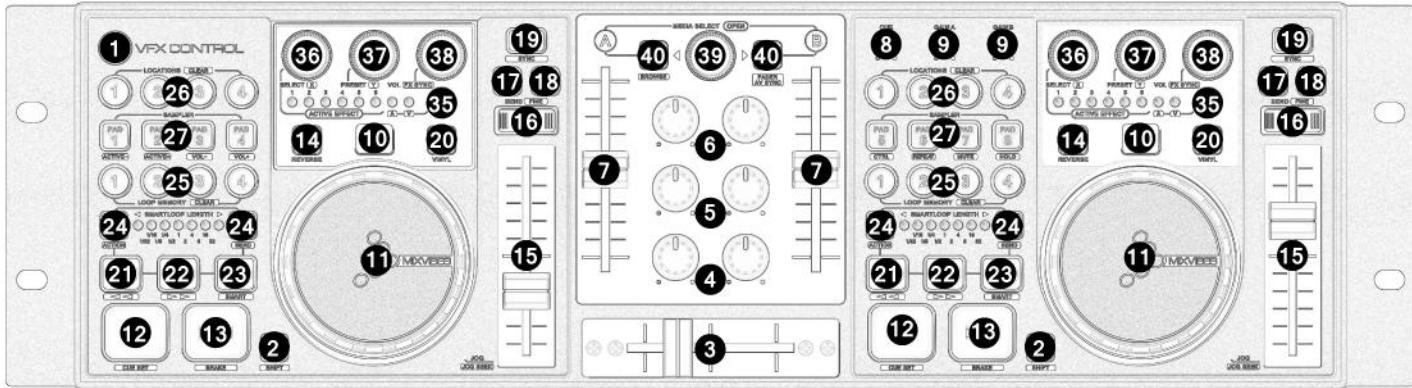

- | | | |
|--|------------------------------------|---|
| 1 - On/Off | 13 - Play | 27 - Pads - <i>Pads mode</i> |
| 2 - Shift | 14 - Reverse | 35 - FX On/Off |
| 3 - Crossfader | 15 - Pitch | 36 - Select FX - <i>Select FX channel</i> |
| 4 - Bass | 16 - Pitchbend | 37 - FX Amount |
| 5 - Middle | 17 - Pitch range | 38 - FX Depth |
| 6 - Treble | 18 - Pitch mode | 39 - Browse / Preview - <i>Change the active browsable / Expand/Collapse collection</i> |
| 7 - Volume | 19 - Match - <i>Sync</i> | 40 - Load - <i>Clone</i> |
| 8 - Cue volume | 20 - Vinyl mode - <i>Slip mode</i> | |
| 9 - Gain | 21 - Loop in - <i>Seek -</i> | |
| 10 - Monitor | 22 - Loop out - <i>Seek +</i> | |
| 11 - Scratch / Pitchbend - <i>Seek</i> | 23 - Loop On/Off - <i>Autoloop</i> | |
| 12 - Cue - <i>Set Cue</i> | 24 - Autoloop Length | |
| | 25. 26 - Locators - <i>Clear</i> | |