


**NUMARK - MIXDECK**

**Select the « External mixer » routing mode in CROSS Audio preferences**

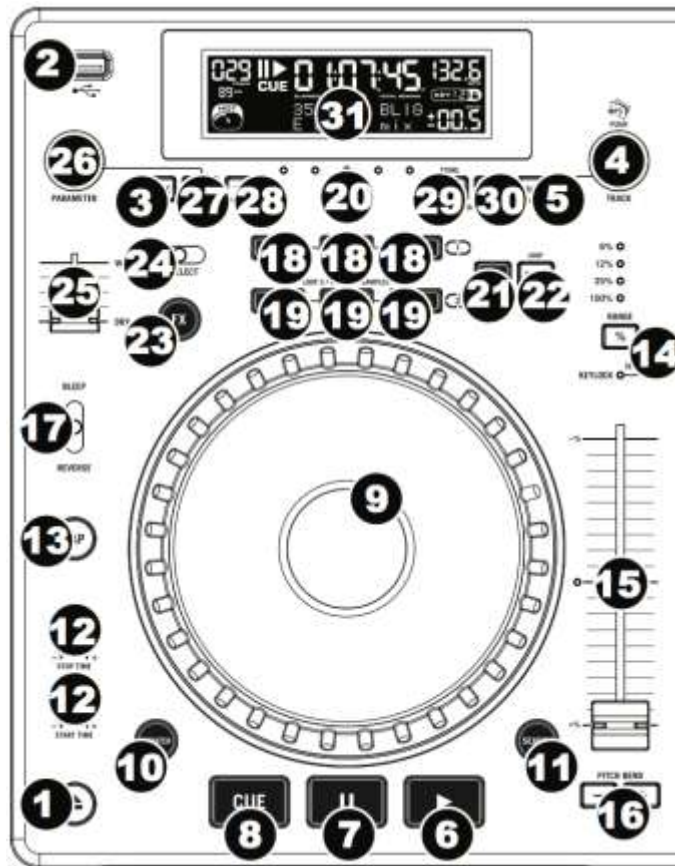

- |  |                                      |  |                     |
|--|--------------------------------------|--|---------------------|
| 1 – Unload                               | 12 – Not used                        | 20 – Shift   | 30 – Toggle display |
| 4 – Browse / preview / expand / collapse | 13 – Not used                        | 21/22 – Not used                                       | 31 – Not used       |
| 5 – Load - Clone                         | 14 – Pitch range - <i>Pitch mode</i> | 23 – Fx on/off   |                     |
| 6 – Play/Pause- <i>CuePlay</i>           | 15 – Pitch                           | 24 – Fx select   |                     |
| 7 – Sync - <i>Match</i>                  | 16 – Pitch bend                      | 25 – Fx amount   |                     |
| 8 – Cue - <i>Set Cue</i>                 | 17 – Reverse                         | 26 – Autoloop - <i>Seek</i> - Seek length in Seek mode |                     |
| 9 – Jog                                  | 18 – Loop in / out / loop on/off     | 27 – Not used  |                     |
| 10 – Vinyl mode                          | 19 – Locators - <i>Delete</i>        | 28 – Not used  |                     |
| 11 – Seek mode                           |                                      | 29 – Add to prepare                                    |                     |