


PIONEER – DDJ-ERGO
(with the firmware version 1.20)

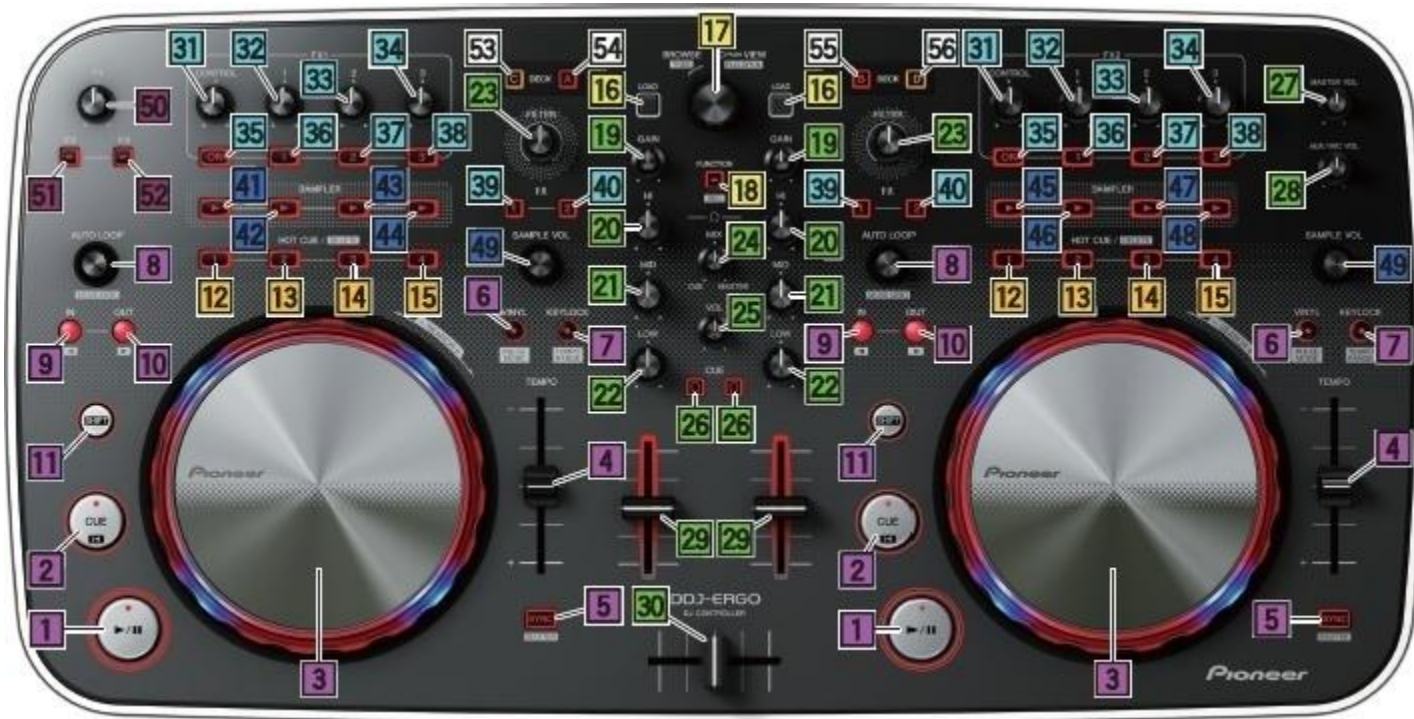

- | | | |
|---|---|---|
| 1 – Play – Cue Play | 16 – Load – Clone | 30 – Crossfader |
| 2 – Cue - Reverse | 17 – Browse / Preview – Change active browsable | 31 – FX Select |
| 3 – Jog | 18 – Expand Collpase collection – Record | 32 – FX Amount |
| 4 – Pitch | 19 – Gain | 33 – FX Depth |
| 5 – Sync – Sampler Sync | 20/21/22 – EQ | 35 – FX On/Off |
| 6 – Vinyl Mode | 23 - Filter | 36 – Echo On/Off |
| 7 - Pitch Mode – Range | 24 – Monitor Mix | 37 – Flanger On/Off |
| 8 – Autoloop – Move Grid (show Beatgrid Editor) | 25 – Monitor Volume | 38 – Roll On/Off |
| 9 – Loop in – Smart Seek - | 26 – Monitor | 39/40 – FX channel |
| 10 – Loop out – Smart Seek + | 27 – Master Volume | 41→48 – Pad – Pad Mode |
| 11 – Shift | 29 – Player Volume | 49 – Sampler Volume Active Pad Volume Select the active Pad |
| 12/13/14/15 – Locator – Clear | | |