


**VESTAX - VCI-400**

**Controller vinyl button should always be ON; use the fourth button of the area 13 to switch between the software vinyl/CD mode**

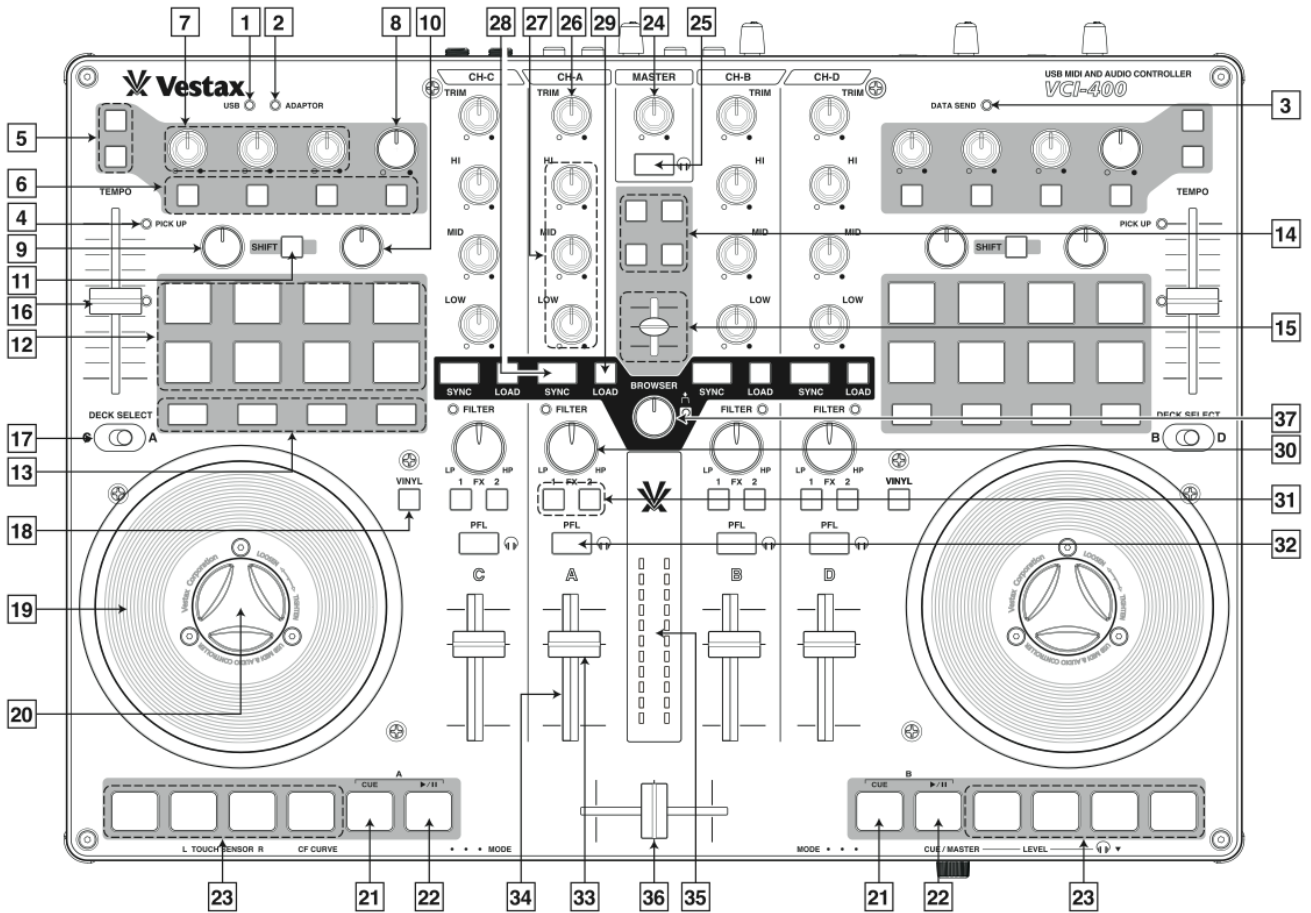

- 5 – Pitch mode / Pitch range
- 6 – FX leds
- 7 – FX amount / FX depth / Brake
- 8 – FX select / FX On-Off
- 9 – Seek - *Seek length*
- 10 – Autoloop select / On-Off
- 11 – Shift
- 12 – Pad - *Pad mode*
- 13 – Loop In / Out/ On-Off
- Vinyl mode
- 14 – Slip mode / Change active

- browsable / ExpandCollapse collection
- 15 – Cue volume
- 16 – Pitch
- 17 – Not used
- 18 – Vinyl should always be ON
- 19 – Jogwheel
- 21 – Cue – *Set Cue*
- 22 – PlayPause – *CuePlay*
- 23 – Locators – *Delete*
- 24 – Master volume
- 25 – Not used
- 26 – Gain
- 27 – EQ
- 28 – Sync / Beatlock *Match*
- 29 – Load - *Clone*
- 30 – Filter
- 31 – FX channel
- 32 – Monitor
- 33 – Volume fader
- 36 – Crossfader